



Guidance for BIKEHOME

Take Both metal plates ① with 7 flat head screws and plastic slices

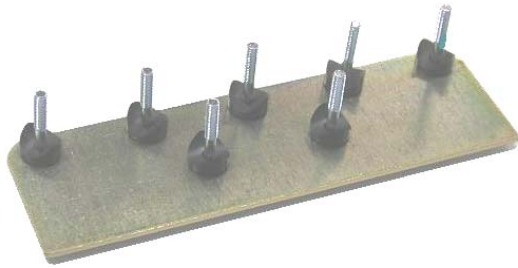


①

Then you put on 7 plastic slices on the rods (arc on top) and mirror-image for the left and right side.
Rod ② (the short rod), rod ③ (with drilled hole for brace), rod ④⑤⑥⑦ (movement rods)

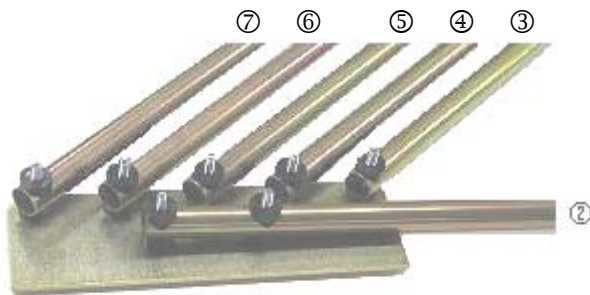

Put on the baseplate ⑧ and nuts on the flat head screws. Nuts for rod ② and ③ snug down, for rods ④⑤⑥⑦ only snug down a little bit that the movement is guaranteed.

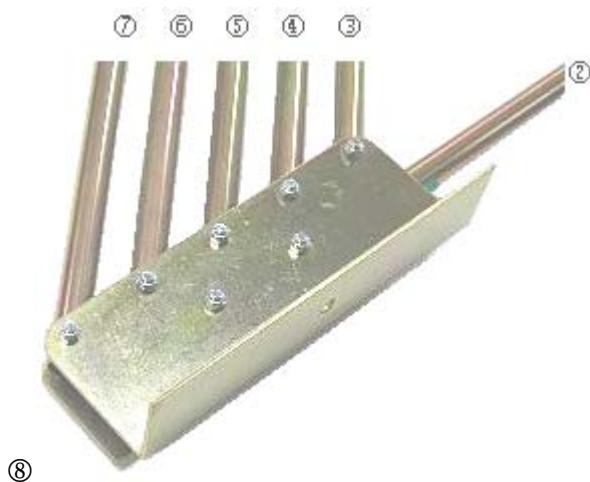

Brace ⑨ to affix on rod ② and ③ , use slotted-head screw “M6 x 40”, metal disc, plastic slices and nuts (without plastic circle)



You put the rods at the outside ② and ⑦ on both sides into the seam of the tarpaulin
The velcros must be on the inside of the Bikehome.



Stick together the rods.

First you affix the baseplate on the ground ⑧ than the brace ⑨ hole spacing 108 cm.

Affix the rods ③④⑤⑥ with the velcros. To attend that the tarpaulin steady imported in the rage of rod ② and ⑦

Attention! When you clean the tarpaulin, only use mild soapsuds and rinse with water.
aggressive detergent can destroy the tarpaulin!